


Lenco

INSTRUCTION MANUAL

66cm (26") LED TV with DVD & DVBT

Model No.: DVL-2690

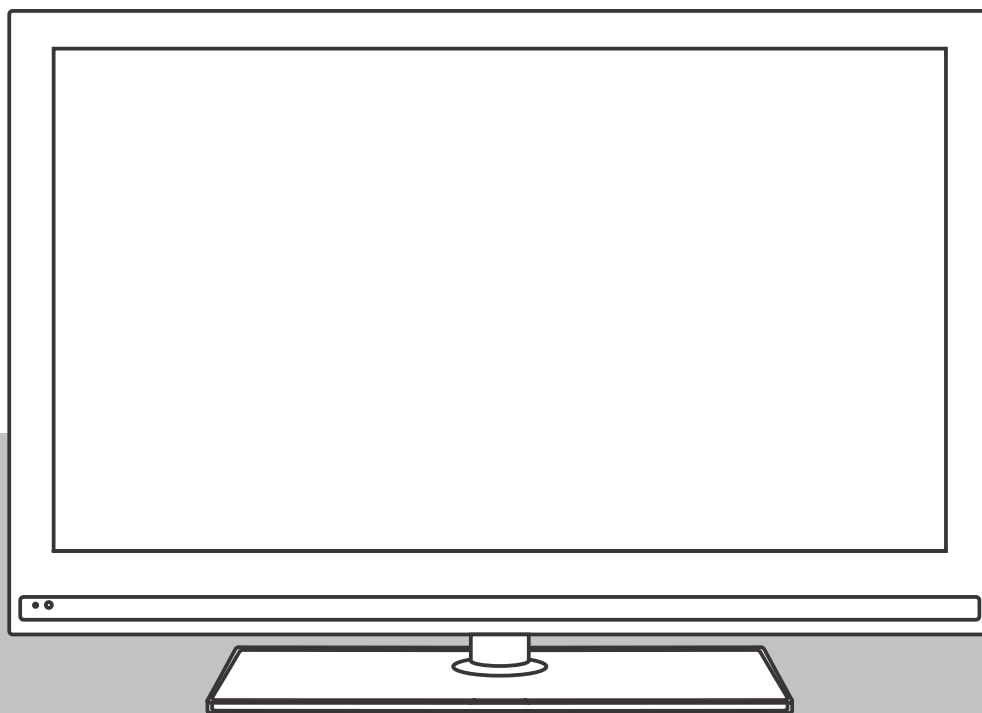

Read all of the instructions before using this TV and keep the instruction manual in a safe place for future reference.

For information and support, www.lenco.eu

Contents



1-3 SAFETY INFORMATION



4 Product Introduction

4 Front View

5 Connecting external devices

6-7 Remote Control

8 Basic Operation



9-16 OSD Menu

9 Channel menu

11 Picture menu

12 Sound menu

13 Time menu

14 Option menu

15 Lock menu

16 Hotel menu



17-19 Multimedia Operation

20-22 Recording Operation

23-24 Simple Troubleshooting



25-32 DVD Operation



33 TROUBLE SHOOTING GUIDE

34 TECHNICAL SPECIFICATIONS

SAFETY INFORMATION

IMPORTANT SAFETY INSTRUCTIONS - READ CAREFULLY BEFORE USE.

Take note of the following safety information which appears on the back of the TV.



CAUTION TO PREVENT ELECTRICAL SHOCK, DO NOT REMOVE ANY COVER SCREWS, NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates that there are important operating maintenance instructions in the literature accompanying this unit.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

Keep these instructions

- Do not use this TV near water.
 - Clean only with a slightly damp cloth.
 - Do not block any ventilation openings.
 - Install in accordance with the supplied Quick Start Guide and this User Guide.
 - Protect the power chord from being walked on or pinched, particularly at plugs, and the point where it exits from the TV.
 - Do not allow the power chord to overhang the edge of a table.
 - Unplug this TV during lightening storms or when unused for long periods of time.
-



WARNING! TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS TV TO RAIN OR MOISTURE. THE TV MUST NOT BE EXPOSED TO DRIPPING AND SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS SHOULD BE PLACED ON THE TV.

NOTE: No naked flames such as candles should be placed on the TV.

IMPORTANT SAFETY INFORMATION (Continued)

This unit has been produced according to all current safety regulations. The following safety tips should safeguard users against careless use and the dangers connected with such use.

- Although this appliance has been carefully manufactured and rigorously checked prior leaving the factory, as with all electrical appliances it is possible for problems to develop. If you notice smoke, an excessive build up of heat or any other unexpected phenomena, you should disconnect the plug from the mains power socket immediately.
- Ensure that the unit is sufficiently ventilated! Never place next to or underneath curtains!
- The mains plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- This set should only be connected to a mains power supply which matches that stated on the label on the rear of the TV – do not attempt to connect it to any other type of supply.
- The socket – outlet must be installed near the equipment and easily accessible.
- To prevent overload, don't share the same mains supply socket with too many other items of equipment.
- Apparatus with Class 1 construction shall be connected to a mains socket outlet with a protective earthing connection.
- Keep away from rodents. Rodents enjoy biting into electric flexes.
- Always hold the plug when pulling out the plug from the mains supply socket. Do not pull on the flex, the flex can become overloaded and cause a short circuit.
- Set up the unit so that no one is able to trip over the flex.
- Do not place heavy items on the flex, which may damage it.
- Take note that the flex cannot be reached and pulled by young children, avoiding injury.
- Do not set up the unit near to heat sources. The casing and the flex could be damaged by the impact of heat.
- The screen is made of plastic and can break if damage is done to it. Be careful when collecting sharp edged plastic splinters to avoid injury.
- Avoid placing the unit on any surfaces that may be subject to vibrations or shocks.
- To protect the unit during a thunderstorm unplug the AC power cable and disconnect the aerial. Caution: Do not touch the aerial (RF) connector.
- When you leave your home for long periods of time, unplug the AC power cable for safety reasons.
- The unit becomes warm when in operation. Do not place any covers or blankets on the unit in order to prevent overheating. The ventilation holes are not to be blocked. Do not set up near radiators. Do not place in direct sunshine. When placing on a shelf leave 5 cm (2") free space around the whole unit.
- Do not allow water or moisture to enter the TV. Do NOT use in wet or moist areas such as Bathrooms, steamy kitchens or near swimming pools.
- Do not use this unit when moisture condensation may occur
- Any repairs must be carried out by qualified personnel only.
- Do not open this unit. A non – expert attempting to repair the unit could be dangerous and potentially cause a fire hazard.

IMPORTANT SAFETY INFORMATION (continued)

- Liquids spilt into the unit can cause serious damage. Switch the set OFF and disconnect the mains power supply, then consult a qualified service person before attempting to use the unit again.
- Do NOT remove the safety covers. There are no useable or serviceable parts inside. You may invalidate the warranty. Qualified personnel must only service this apparatus.
- Do NOT tap or shake the screen, you may damage the internal circuits. Take good care of the remote control, do not drop.
- Never place hot objects or open flame sources on or close to the TV.
- High temperatures can melt plastic and lead to fires.
- To clean the TV use a soft dry cloth. Do NOT use solvents or petrol based fluids. For stubborn stains, you may use a damp cloth with dilute detergent.

Headphone Warning

Loud music can damage your hearing irreversibly, therefore do not set the volume to a high level when listening through headphones, particularly for lengthy listening periods.


Where to install

Locate the television away from direct sunlight and strong lights, soft indirect lighting is recommended for comfortable viewing. Use curtains or blinds to prevent direct sunlight falling on the screen. Place the TV on a sturdy platform of which the surface should be flat and steady. This will prevent it from falling over.

Make sure the television is located in a position where it cannot be pushed or hit by objects, as pressure will break or damage the screen, and so that small objects cannot be inserted into the ventilation slots or openings in the cabinet.

Product Introduction

Front View

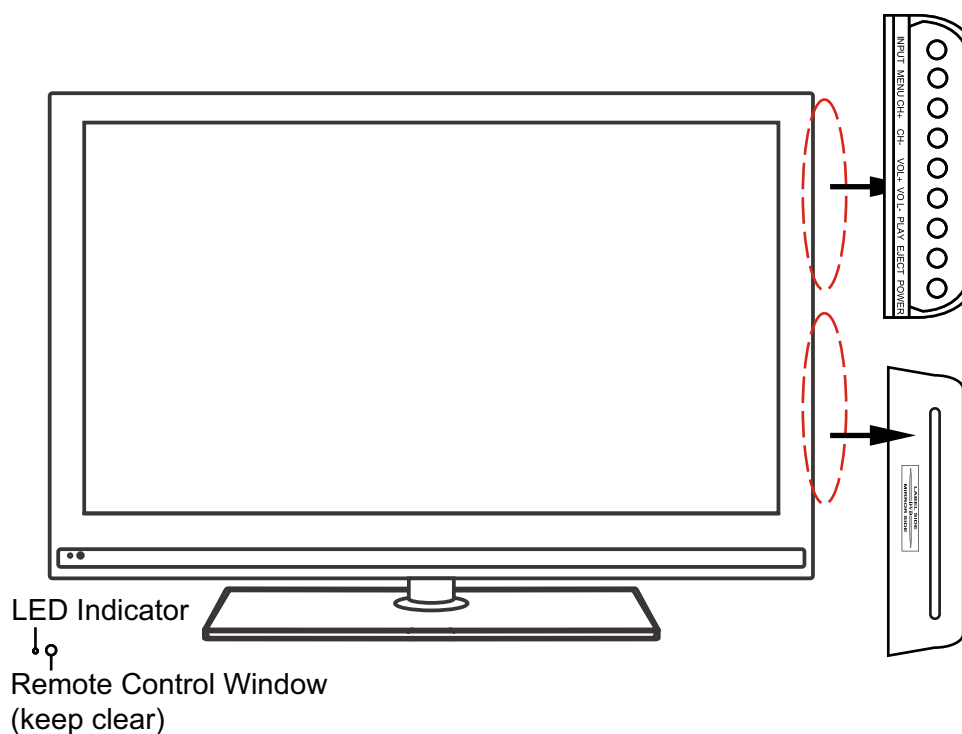

(IR) Infrared Receiver: Receives IR signals from the remote control.
(Power on/Standby) LED indicator: Press **POWER** to turn on and off.

Indicator on(Blue)

Standby mode

Indicator on(Off)

Power on mode

The effective receiving range for the signal is 5-8 metres from the front of the remote control window, and 30° to the left or right side and 20° above or below the control window.

INPUT: Display the input source menu.

MENU: Display/exit the OSD menu.

CH+/-: Scan through channels.

VOL+/-: Adjust the volume.


PLAY: Play/pause the disc playing.

EJECT: Eject the disc.

POWER: Turn on/standby the TV set.

DVD: Insert a 12cm disc according to the silk.

Connecting external devices (continued)

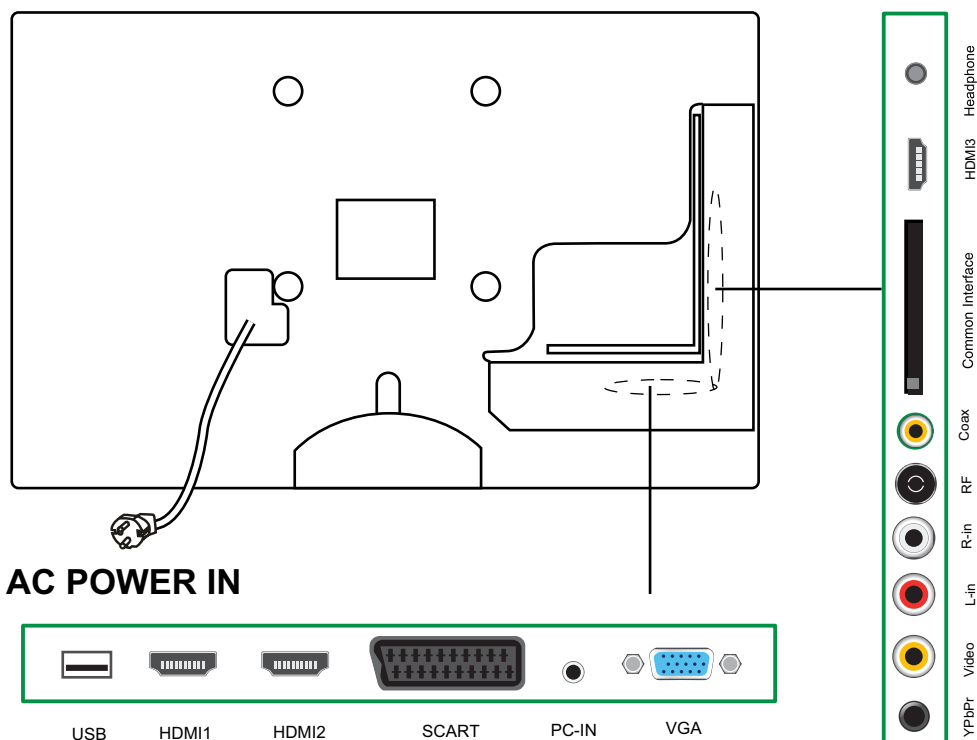

AC POWER IN: 100-240V ~ 50/60Hz.

USB: USB jack for Multi-Media playback and PVR. (Do not use USB extension cable to connect any USB device.)

HDMI1/2/3: Connect it to the HDMI of DVD or other equipment.

SCART: Connect them to the SCART video output terminal of DVD. (used in component source)

PC-IN: Connect it to the audio output terminal of PC.

VGA: For PC display. Connect it to the D-Sub 15 pins analog output connector of the PC.

Coax: Digital audio output.

Headphone: Connect it to your headphone or other audio equipment.

YPbPr: Connect them to the YPbPr video output terminal of DVD. (used in component source)

Video: Connect it to video output terminal of DVD.


L/R in: Connect them to the audio output terminal of DVD. (shared with YPbPr)

RF: Connect antenna or cable 75 Ohm coaxial to receive TV signal.

Common Interface: CI slot.

Remote control

The remote control is using Infra-Red(IR). Point it towards the front of the TV. The remote control may not work correctly if it is operated out of range or out of angle.

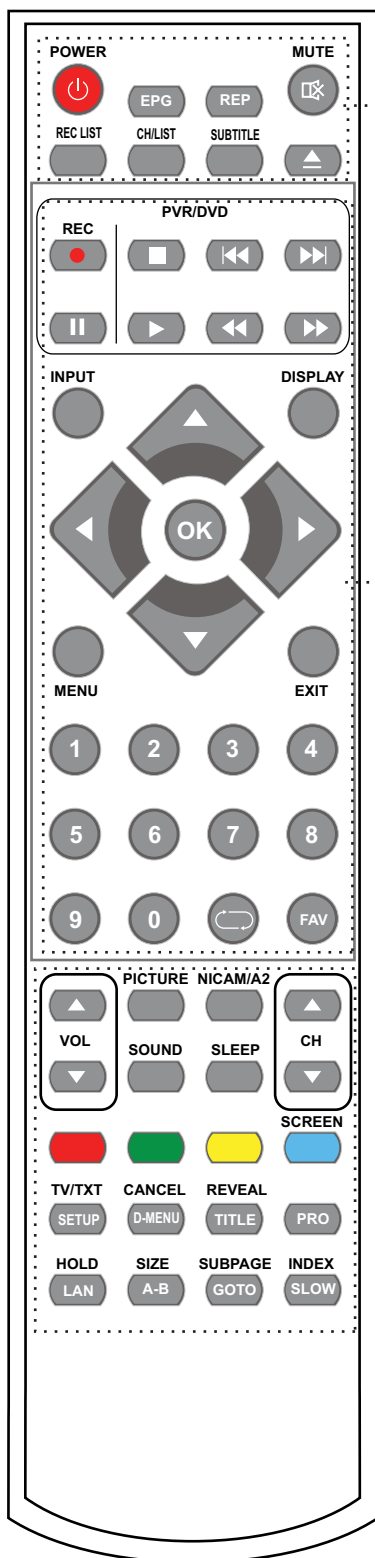

POWER: Turn the TV on/standby.

MUTE: Press to mute the sound, press again or press VOL+ to unmute.

REC LIST: Record List.

CH/LIST: Display the programs list.

SUBTITLE: Turn on/off the subtitle display in DTV mode and DVD mode.

EPG: To show the Electronic Program Guide during no-menu state only in DTV mode.

REP: Repeat playing the title or chapter.

▲ : Load/eject DVD disc.

PVR/DVD function

REC ● : Press to start record the program in DTV mode.

■ : Stop program.

◀◀ : Previous chapter.

▶▶ : Next chapter.

|| : Pause program.

▶ : Play program.

◀◀ : Fast reverse.

▶▶ : Fast forward.

INPUT: Press to display the input source menu.

DISPLAY: Press to display the current mode's information.

MENU: System setup menu.

EXIT: Exit the OSD menu.

FAV: Display the favorite program list.

NUMBER BUTTONS

Press 0-9 to select a TV channel directly when you are watching TV.




Return to the previous channel viewed.

CURSOR KEYS (▲/▼/◀/▶/OK)

Allows you to navigate the on-screen menus and adjust the system settings to your preference.

Remote control (continued)

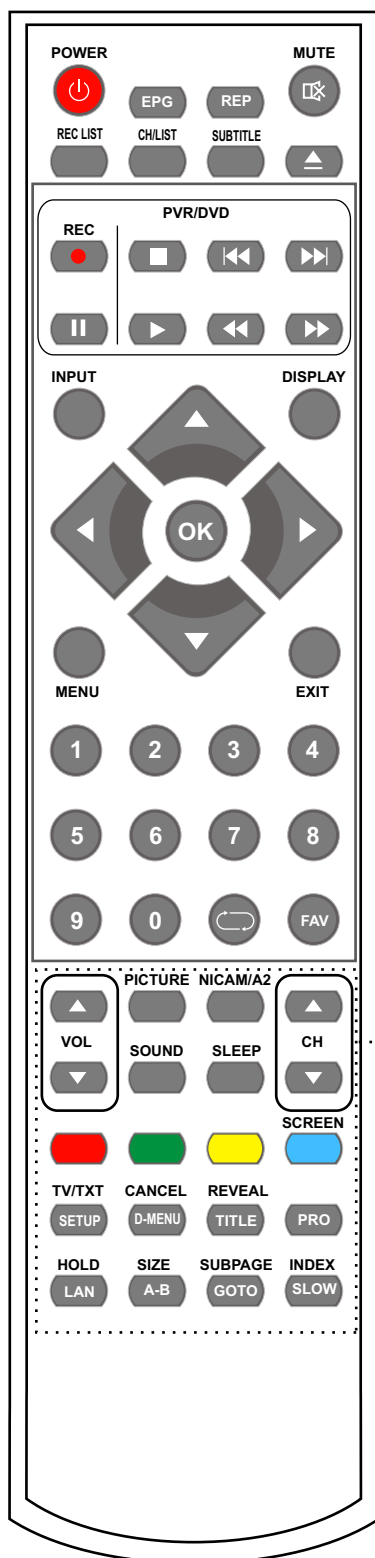

CH▲/▼: Scan through channels.

VOL▲/▼: Adjust the volume.

PICTURE: Select the picture mode.

NICAM/A2: TV Nicam/A2 select.

SOUND: Select the sound mode.

SLEEP: Standby timer.

SCREEN: Turn on/off the screen.

TV/TXT: Turn off/on the Teletext display.

CANCEL: Cancel the Teletext display.

REVEAL: Reveal any hidden text.

HOLD: Hold or carry on the current subpage.

SIZE: Press to see top half of page double size,

Press again to see the bottom

half of page double size. Press again for normal size.

SUBPAGE: Press to enter subpages, press again to cancel.

INDEX: Go to index.

SETUP: DVD system setup.

D-MENU: DVD play list/Disc menu.

TITLE: DVD title.

PRO: Edit the program and play.

LAN: Select DVD disc language.

A-B: Select and play the preferable paragraph of DVD program
by pressing this key twice at the beginning and end of it.

GOTO: Play your favorite title/chapter/track.

SLOW: Play DVD programs at slow speed.

Colour buttons: Short cuts-follow the coloured links in the text

Basic Operation

Power on/off

1. Connect to the power supply with the power code.
2. -To turn on the TV
Press **POWER** button on the TV or remote control.
-To turn off the TV
Press **POWER** button on the TV or remote control.

Input Source select


Press **INPUT** button on the TV set or remote control to display input source menu, and use **CH+/-** button on the TV set or **^/∇** button on remote control to select the input source, press **OK** button on the remote control to enter.

Note: Before you select the input source, make sure the connections are prepared.

Input Source
DTV
ATV
CADTV
SCART
YPBPR
DVD
PC
HDMI1
HDMI2
HDMI3
AV
USB
Move OK Select EXIT Quit

Basic OSD Menu operation

Press **MENU** button to display the OSD menu as below:

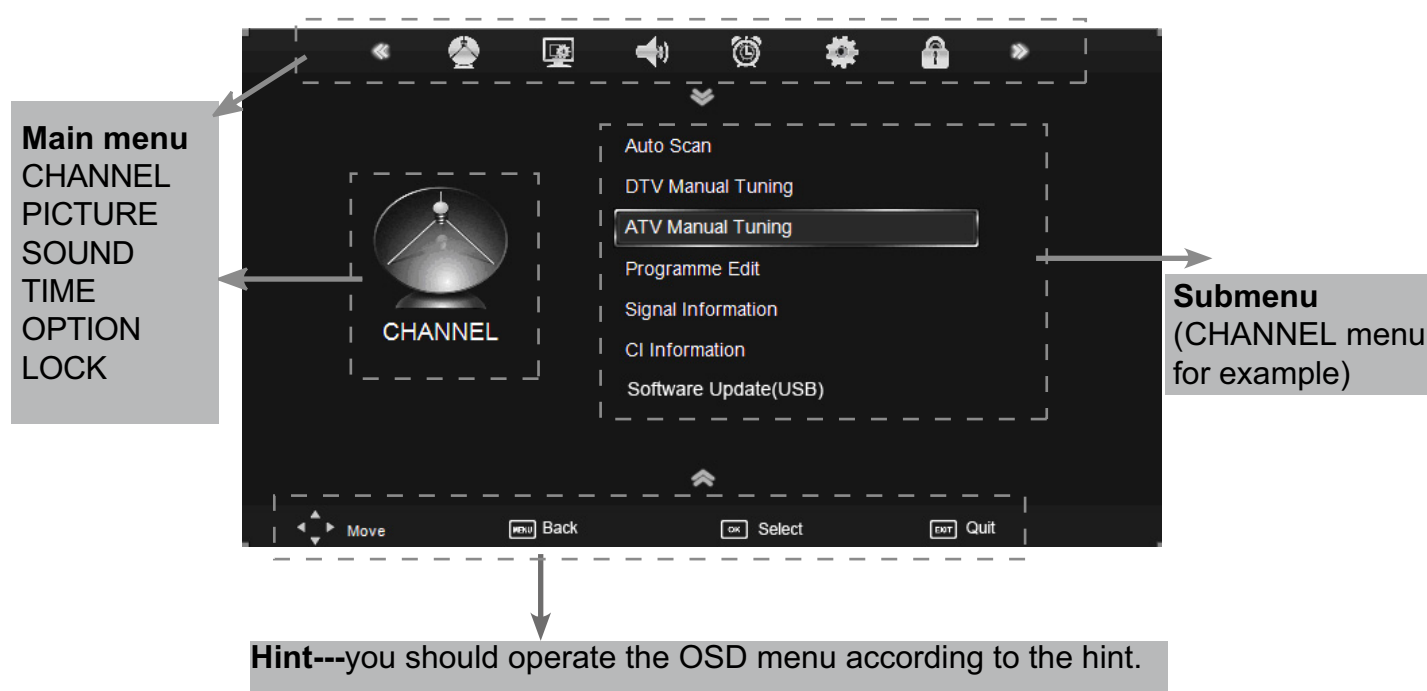

Use **</>** button to select the main menu, and press **∇** button to enter the submenu.
In the submenu, use **^/∇** button to select the function item, press **</>** button to adjust/setup, or press **OK** button to enter the submenu.

* (Press **MENU** button to return to the upper menu.)

* (Press **EXIT** button to exit the menu display.)

Note1: Only when you input the suitable signal, the relevant items can be activated

Note2: Please operating the OSD menu according to hint on the bottom of the banner.

OSD Menu

1. CHANNEL menu



Description


Auto Scan

Press **OK** button to enter the hint menu, and select the Country and Tune Type mode for the TV, then press **OK** button to start auto tuning.



DTV Manual Tuning

Press **OK** button to enter the DTV Manual Tuning menu, select a DTV channel, and press **OK** button to start searching.

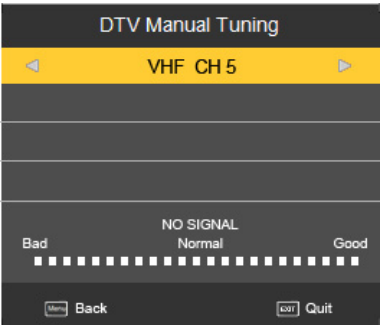

ATV Manual Tuning

Press **OK** button to enter the ATV Manual Tuning menu.

Storage To: Select a position for storing the program.

System: Select a TV system for searching.


Current CH: Select the channel you want to manual tuning.

Search: Press < / > button to manual search.

Fin-Tune: Press < / > button to fine-tune.

Frequency: Display the current frequency.


*Note: Press **RED** button to save all the setups you have changed.*

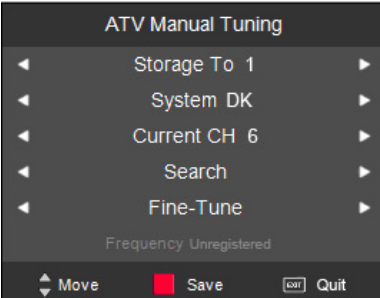

OSD Menu

Program Edit

Press **OK** button to enter the Program Edit menu as the following picture.

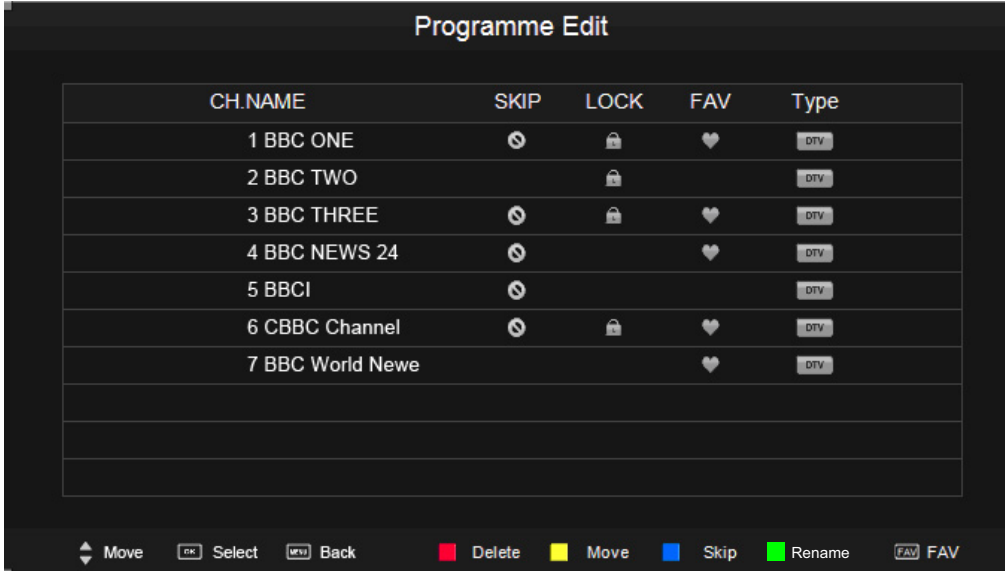

Delete: Select a channel and press **RED** button, “Delete” will appear on the right of the program edit menu next to the channel you have chosen, then press **RED** button again, the program will be deleted. However if you decide not to continue to delete press the menu button to quit.

Move: Select an channel, and press **YELLOW** button, then you can use $\wedge$ and $\vee$ buttons to change the position of the program, press **YELLOW** again to confirm the change. Press menu to exit and it will automatically save the current set.

Skip: Select a channel and press the **BLUE** button to label the channel, as long as the channel has a skip label it will be skipped when searching through the channels with the CH+/- buttons.

Rename: Select an **ATV** channel and press the **GREEN** button to change the name of the channel by $\wedge$ $\vee$ $<$ $>$ buttons

FAV: Select a program, press **FAV** button to set or delete the program as the favorite channel.

Signal Information

Display the signal information in DTV mode.

CI Information


Please contact your “pay perview” provider who can supply a viewing card and cam unit with instructions for their use.

Software Update(USB)

Press **OK** button to enter the menu, and update the software by the USB device.

OSD Menu

2. PICTURE menu

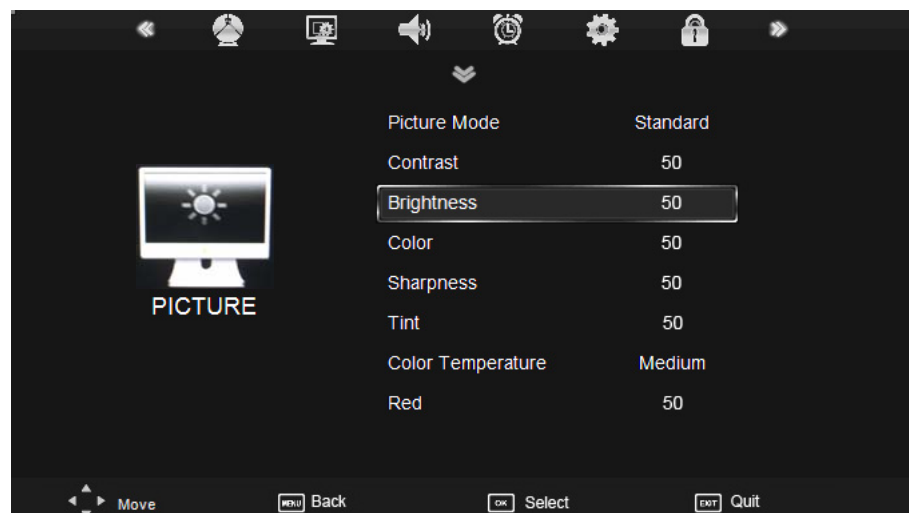

Description

Picture Mode: Choose from Standard, Dynamic, User and Mild.

Note: *Contrast, Brightness, Color and sharpness are only available and can be adjusted in the User mode option in the Picture Mode Settings.*

Contrast: Controls the difference between the brightest and darkest regions of the picture.

Brightness: Controls the overall brightness of the picture.

Color: Control the color.

Sharpness: Increase this setting to see crisp edges in the picture; decrease it for soft edges.

Tint: Controls the tint (NTSC mode only).

Color Temperature: Choose from Medium, Cool, User and Warm.

Note: *Red, Green and Blue are only available in PC, VGA mode when in Colour Temperature Mode.*

Red: Controls the red colour of the picture.

Green: Controls the green colour of the picture.

Blue: Controls the blue colour of the picture.

Aspect Ratio: Choose from 4:3, 16:9, Zoom1, Zoom2, Just Scan and Panorama.


Note: *The aspect ratio modes you can select according to the input source.*

Noise Reduction: Choose interference noise modes form Off, Low, Middle, High and Default.

Screen(PC mode only): Press **OK** button to enter the submenu to adjust Horizontal / Vertical position, Size or Phase of the picture.

OSD Menu

3. SOUND menu

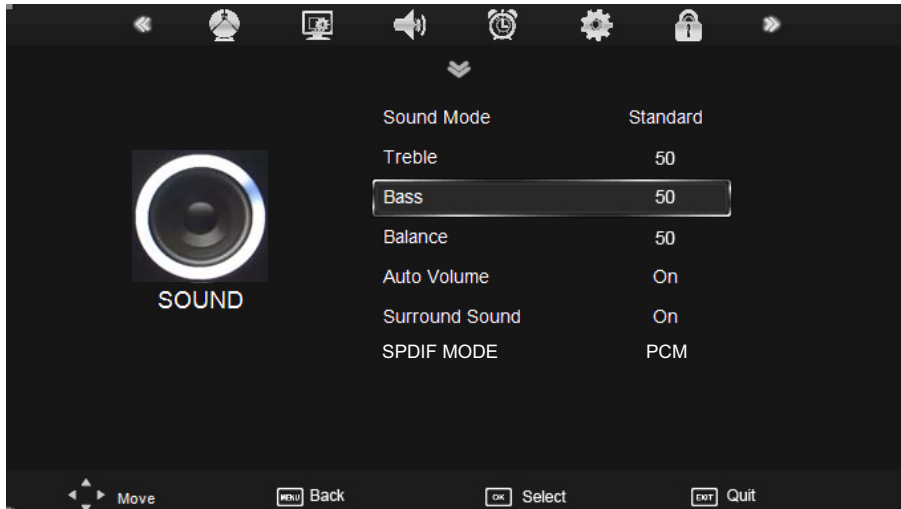

Description

Sound Mode: Allows you to select among: Standard, Music, Movie, Sports and User.

Treble(Could be adjusted when the sound mode is User): Controls the relative intensity of higher pitched sounds.

Bass (Can be adjusted when the sound mode is set to User): Controls the relative intensity of lower pitched sounds.

Balance: To adjust the balance of the left and right sound track, or turn off the volume of the left and right sound track.


Auto Volume: Control the volume of the program automatically when you turn on the function by selecting “On”.

Surround Sound: Turn on/off the surround sound function by selecting “off”/“on”.

SPDIF MODE: Allows you to select among: Off, PCM and Auto.

OSD Menu

4. TIME menu

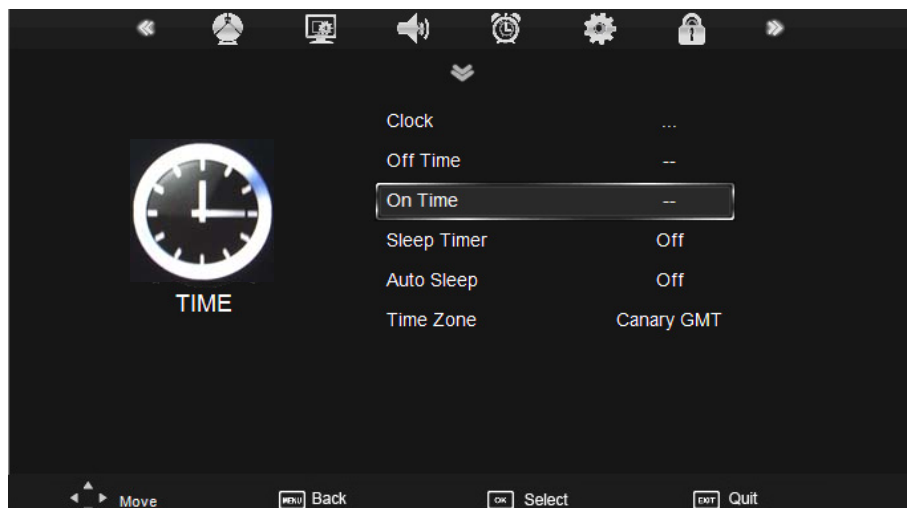

Description

Clock: Use the < and > buttons to select the position, and use the ∨ and ∧ buttons to set the time.

Note: *User can not change time manually during DTV mode, for time is from signal source directly.*

Off Time: Press **OK** button to enter the submenu, you could set the time when the TV set will be turned off automatically, you could also set the frequency.

On Time: Press **OK** button to enter the submenu, you could set the time when the TV set will be turned on automatically, you could also set the Source, Channel, Volume.


Sleep Timer: Allows you to setup the sleep timer among: 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min and off.

Auto Sleep: Turn on/off the auto standby function.

Time Zone: Allows you to select the time zone.

OSD Menu

5. OPTION menu

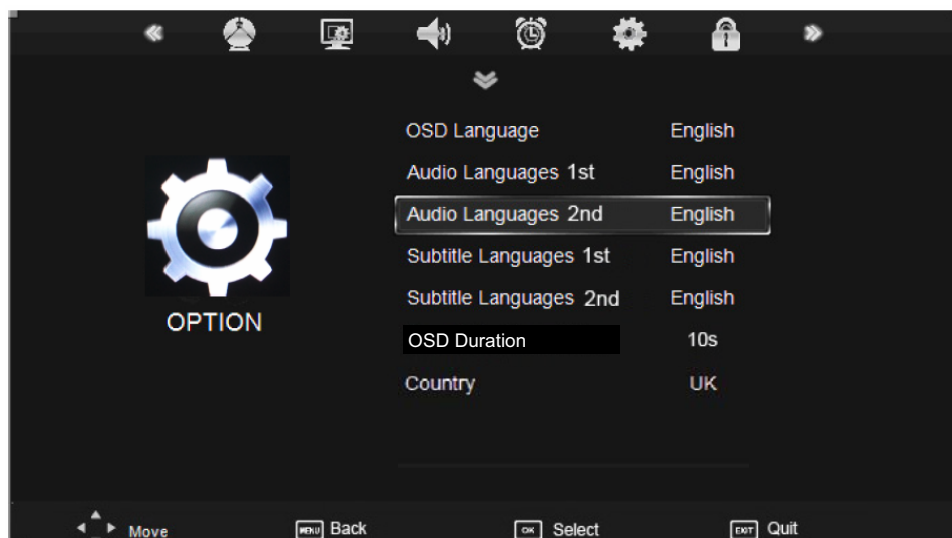

Description

Language: Allows you to select menu language.

Audio Language 1st/2nd (can be selected in DTV mode): Allows you to select first and second audio language.

Subtitle Language 1st/2nd (can be selected in DTV mode): Allows you to select first and second subtitle language.


OSD Duration: Allows you to setup the time of the menu display on the screen among: 5s, 10s, 15s, 20s, 25s, 30s, 35s, 40s.

Country: Display the current Country, and you should select the Country when you want to auto tuning.

Restore Factory Default: Press **OK** button to restore factory default.

OSD Menu

6. LOCK menu

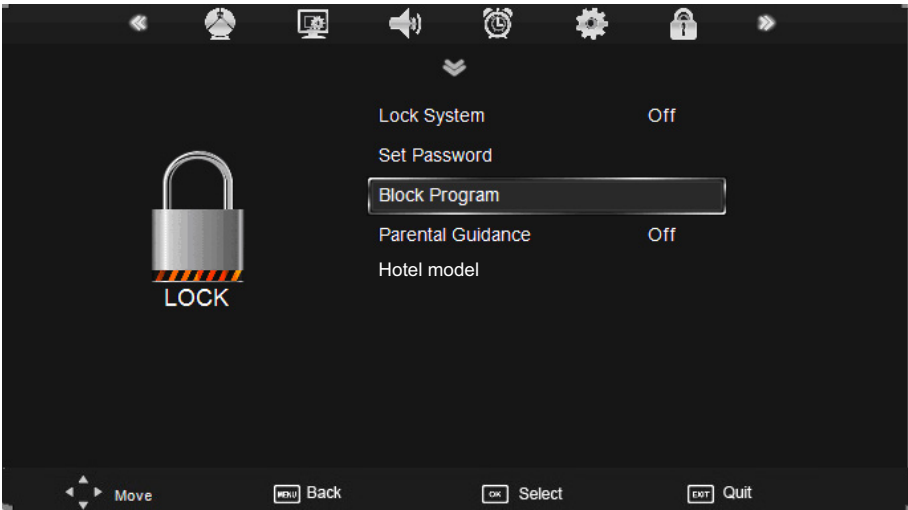

Description

Lock System: Turn on/off the Lock System function.

Note: *You should enter the code to operate the menu.(original code is 0000)*

Set Password: Set pin code. If the Pin code has been changed you must enter the present code.

 New : Enter the new password.

 Confirm: Enter the new password.


Block Program: Lock the channel, you have to enter the code to view the channel. Use **^** and **v** buttons to select the channel, and press the **GREEN** button on the remote control to lock the channel or cancel.



Parental Guidance: Allows you to select the Parental Guidance mode.

OSD Menu

7.Hotel Mode

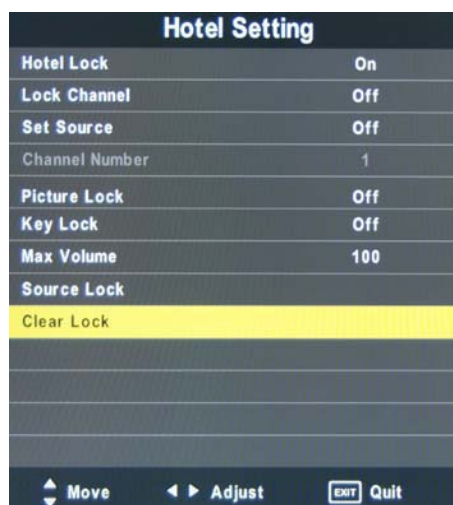

Hotel Lock : Press ▲ and ▼ to select **Hotel Lock** and press ► to select the ON or OFF.

Lock Channel : If current **SOURCE LOCK** is TV, press ▲ and ▼ select CHANNEL LOCK and then use ► to select the ON or OFF. When choosing on, in channel menu, user can not operate the singal channel reveiving, channel editing and so on.

Set Source: Press ▲ and ▼ to select **Set Source** and press ►button to select the source for the initial input source.

Channel Number: If Set Source is **TV / DTV Radio** or **DTV Video**, press ▲ and ▼ button select Channel Number and then use ► to select the program number.


Picture Lock: Press ▲ and ▼ to select **Picture Lock**, if **Picture Lock** is **On**, the picture menu will not be shown.

Key Lock: Press ▲ and ▼ select **Key lock** and then use ► to lock the buttons on the TV set.

Max Volume: Press ▲ and ▼ select **Max Volume** and then use ► to select the max volume of the sound.

Source Lock : Press ▲ and ▼ to select **Source Lock** and press ► to select the source for prohibiting any external input.

Note: The current using channels can not be locked.

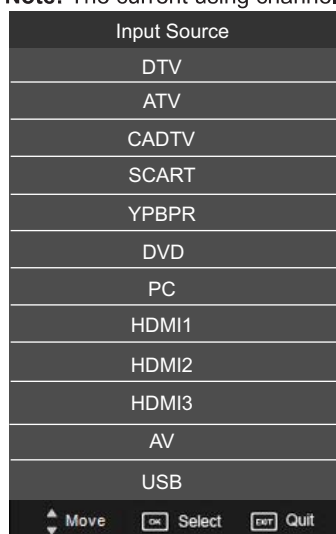


Clear Lock : Press ▲ and ▼ to select **Clear Lock** and press ► to cancel all the settings of lock, it means set all the locks to OFF; preset channel to OFF, max volume to 100.




Multimedia Operation

Basic Operation

1). Press the INPUT button on the remote control to display the input source menu, select USB source by the ◀ / ▶ buttons, and press OK button to enter the Multimedia menu seen below.

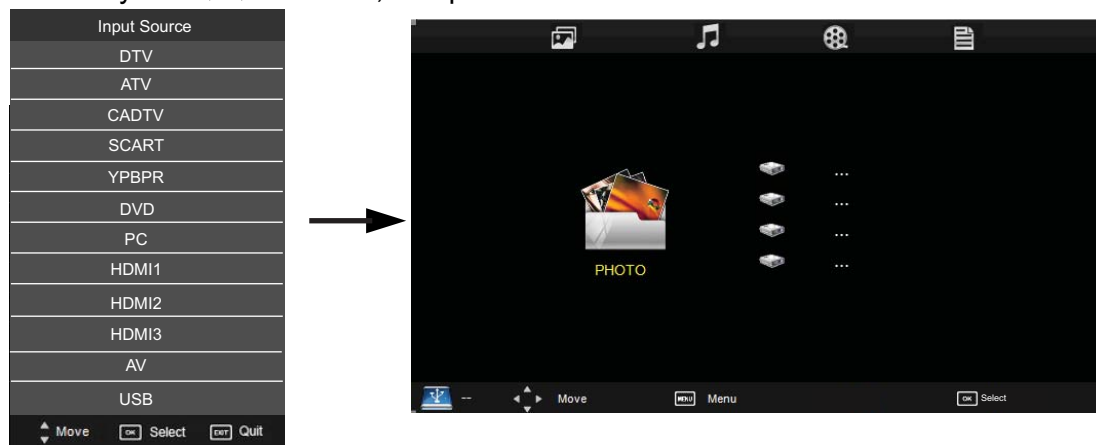


2). Insert USB device, you will find the name of the device display on the screen.

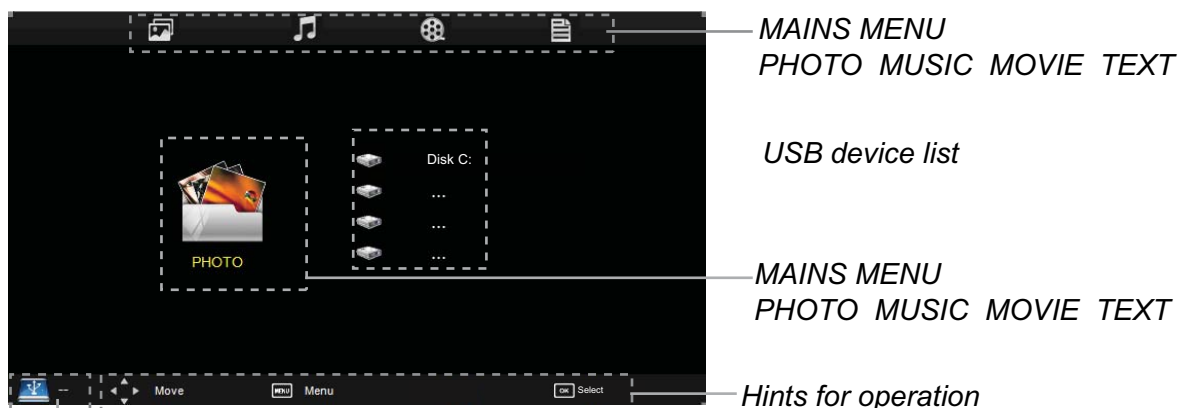

Hints and informations of USB device

3). Press ◀ / ▶ button to select the kind of the files in the device you want to program from PHOTO, MUSIC, MOVIE and TEXT. Press ▲ / ▼ button to select the device and press OK button to enter.

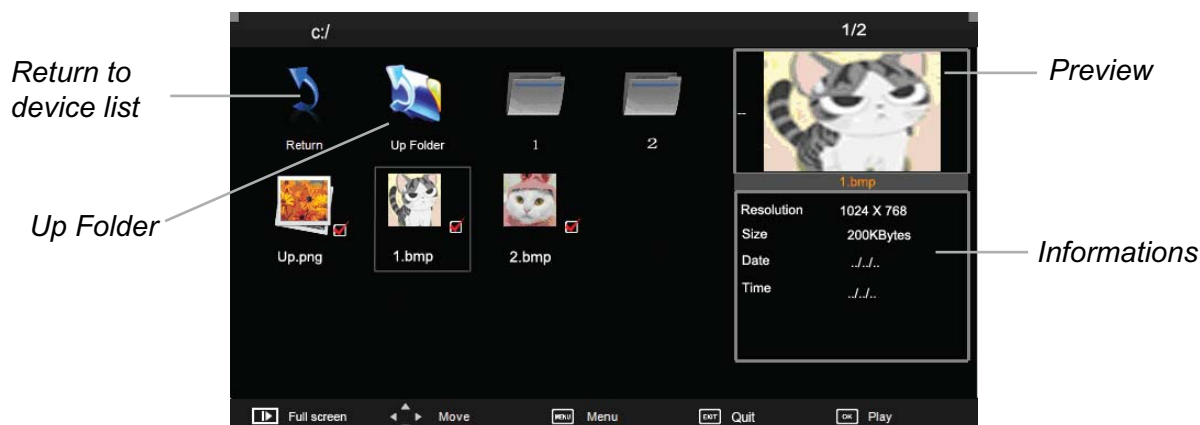

Press ◀ / ▶ / ▲ / ▼ buttons to move , and press OK button to select the file or unfold the folder, Then press ▶ button to program the files (be signed) you select or the files in the fold you select, You can display the option table on the bottom of the screen by **OK** button, press **■** button to hide. Press **■** button to stop and exit the full screen program.

Multimedia Operation

1. Photo

Play the photo



Press ◀/▶ button to select the option on the table, and press **OK** button to change.

Repeat: Select the repeat mode from Repeat All, Repeat 1, Repeat None.

Music: Play/pause the music program (you can only play or pause the music you have programed).

Playlist: Display the playlist on the screen, and you can select the photo by ▼/▲ button, and press **OK** button to program. Press ◀/▶ button to return to the options table.

Info: Display the information of the photo.


Rotate: Rotate the photo clockwise/counterclockwise.

Zoom Out/In: Zoom out/in the photo.

Move View: Move the photo in Zoom in mode.

2. Music

Play the music

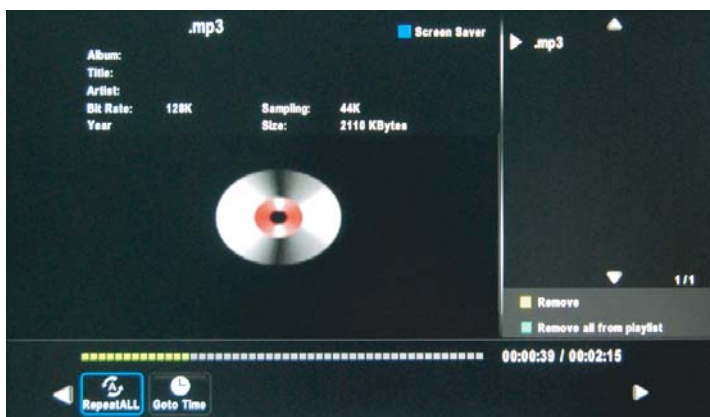

Press ◀/▶ button to select the option on the table, and press **OK** button to change.

Press ▼/▲ button to select the music, and press **OK** button to program.

Repeat: Select the repeat mode from Repeat All, Repeat 1, Repeat None.

Search: Program the music form the time you set.

Press **OK** button to display the time table, and select the position by ◀/▶ / ▼/ ▲ button, set the time by the number buttons, select "OK" and press **OK** button to search.

Screen Saver: Press **BLUE** button to enter the Screen Saver mode, press again to exit.



Multimedia Operation

3. Movie

Play the movie



Press ◀/▶ button to select the option on the table, and press **OK** button to change.

Repeat: Select the repeat mode from Repeat All, Repeat 1, Repeat None.

Set A-B: Select and play the preferable paragraph of the program by seting A and B at the beginning and end, and there will be a sign on the left screen, press **OK** button again to cancel.

Playlist: Display the playlist on the screen.

Info: Display the information of the movie.

Slow: Play the programs at slow speed, press ▶ button to cancel.

Step: Step the programs by **OK** button, press ▶ button to cancel.

Goto timer: Program the movie form the time you set.


Zoom out/in: Zoom out/in the movie screen.

Aspect Ratio: Select the aspect ratio of the screen display.

Move View: Move the photo in Zoom in mode.

4. Text

Play the text

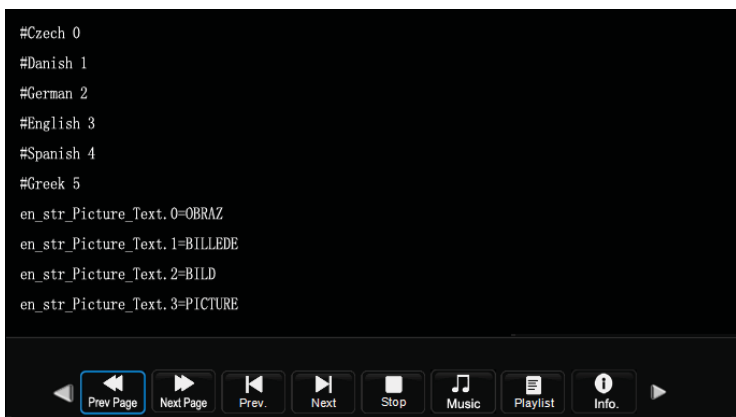

Press ◀/▶ button to select the option on the table, and press **OK** button to change.

Prev/Next page: Turn to previous/next page of the text.

Prev./Next: Turn to previous/next file.

Stop: Stop auto turning pages.

Music: Play/pause the music program.

Playlist: Display the playlist on the screen.

Info: Display the information of the text.

Recording Operation

PVR settings

Press the MENU button, and select CHANNEL menu.



1). Recorded List




Recording list: Display the Recorder List menu.

INFO: Display the information of the program you recorded.

RED button: Delete the program you select.

2). Recorded Mode

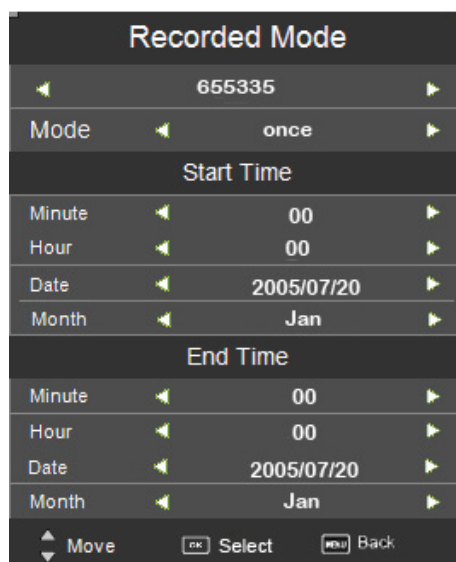

Set the recorded mode

The TV will record the program automatically according to your settings.

TITLE: Display the name of the recording program.

MODE: Select the record mode.

Start Time: Select the start recording time.

End Time: Select the end recording time.

Press **OK** button to save the setting and exit the menu.

3). Schedule List

Schedule List

Mode	Time	Date	Programme Title	Channel Name	Result
	...	...	...	...	
	...	...	...	...	
	...	...	...	...	
	...	...	...	...	
	...	...	...	...	
	...	...	...	...	
	...	...	...	...	
	...	...	...	...	
	...	...	...	...	

... ...

 MOVE

 Delete

 Back

 Quit

Display the recorder shedule

Note: a. Could't add shedules which have existent on the list;

b. Could't add shedules when the list is full, you have to delete some schedules;

c. You could delete a schedules by RED button on the remote control.

4). PVR File System

PVR File System	
Select Disk	C:
Check PVR File System	Start
USB Disk	
Format	
Time Shift Size	
Speed	
▲ Move OK Select	MENU Back

Setup the PVR File system before you start recording.

Select Disk: Select the device for the Record files.

Check PVR File System

USB Disc: Display the USB state.

Format: Format the USB device for PVR operating.

Time Shift Size: Display the size of the USB device (The device has been formatted).

Speed: Display the speed of the USB device (The device has been formatted).

Recording Operation

5) Record Start

When you finish the settings above, you could start recording by select **Start Recording** in the menu and press OK button in DTV mode. (You can also start recording by press the **REC** button on the remote control)

Record buttons

REC(Recording): Press to enter the recording mode.

|| PAUSE: Press to enter the timeshift mode.

Recording list: Press to display the recording list.

■ Stop: Press to stop recording.

Recording menu

When you press **REC** button, the screen will display the recording menu as below:




- Note:
- a. You could change the mode of Recording menu by REC/Exit button.
 - b. Press STOP button to exit the recording mode.
 - c. Press PLAY button to play the program you are recording from the beginning.
 - d. Press Recording list button to display the Recorder list, and you could play the program you selected. The recording will be going on, and the Recording menu will display when you exit the Recorder list.

Timeshift

Press PAUSE button to enter the Timeshift mode, and the picture will be paused, the recording will begin.

- Note:
- a. You could change the mode of Timeshift menu by **REC**/Exit button.
 - b. Press STOP button to exit the Timeshift mode.
 - c. Press PLAY button to play the program you are recording from the beginning.

Playback

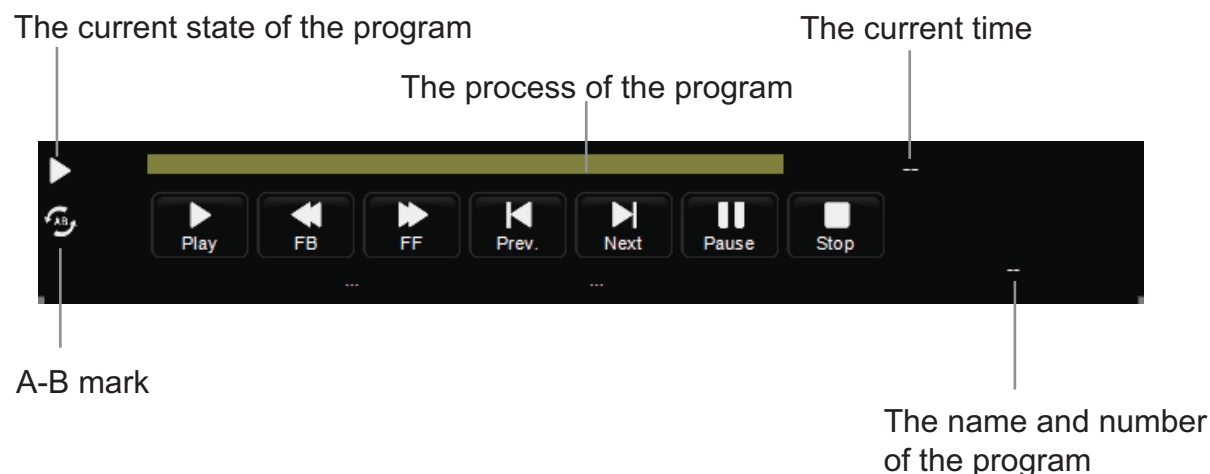

Simple Troubleshooting

If the display fails or performance dramatically deteriorates check the Display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure.

If the display still fails to perform as expected, connect your helpline for assistance.

No power

- Check all connections to the TV.
- Press either the power button or the Standby button on the Remote control.

No picture or sound

- Ensure that the TV is plugged in and the power is on.
- Ensure that the aerial is connected.
- Try a different programme.

Poor picture quality

- Check the aerial connections.
- Check that the channel is tuned in properly.
- Adjust the picture settings: brightness, colour, sharpness, contrast, hue.
- Make sure that the TV is not located close to electrical appliances that may emit radio frequency interference.

No colour

- Adjust the colour setting.
- Check that the programme is broadcast in colour.
- Check that the channel is tuned properly.

TV does not respond to remote control

- Check that there are no obstructions between the remote control and the unit.
- Check that the remote control is within range of the unit.
- Check that the batteries in the remote control are not weak or exhausted.

This LCD TV is for household use and registered as harmless on electromagnetic waves. Therefore, you can use it in every location as well as residential areas.

Simple Troubleshooting

If the display fails or performance dramatically deteriorates check the Display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure.

If the display still fails to perform as expected, connect your helpline for assistance.

No power

- Check all connections to the TV.
- Press either the power button or the Standby button on the Remote control.

No picture or sound

- Ensure that the TV is plugged in and the power is on.
- Ensure that the aerial is connected.
- Try a different program.

Poor picture quality

- Check the aerial connections.
- Check that the channel is tuned in properly.
- Adjust the picture settings: brightness, color, sharpness, contrast, hue.
- Make sure that the TV is not located close to electrical appliances that may emit radio frequency interference.

No colour

- Adjust the color setting.
- Check that the programme is broadcast in color.
- Check that the channel is tuned properly.

TV does not respond to remote control

- Check that there are no obstructions between the remote control and the unit.
- Check that the remote control is within range of the unit.
- Check that the batteries in the remote control are not weak or exhausted.

This LCD TV is for household use and registered as harmless on electromagnetic waves. Therefore, you can use it in every location as well as residential areas.

DVD Operation

Basic Operation

Press the Power button on the TV or the remote control, then press the TV/AV button to select DVD mode.

If there is no disc in the DVD player the screen will show "NO DISC".

Insert Disc according to picture next to disc slot.

Do not touch the playing surface.

Hold the disc around the outside with your fingers and place the disc into the slot. The player will automatically draw the disc into the player.

To "Eject" the disc, press the EJECT button on the TV or the "▲" button on the remote control.

DVD Setup Mode

- Setup Mode provides the menu for the configuration of General Setup Page, Audio Setup Page, Dolby Digital, Setup, Preference Page.
- Item selection in the Setup Menu is done by using the Navigation Arrows, SETUP button and the OK button.
- Press the SETUP button first, enter into SETUP menu, then press the DIRECTION RIGHT button, you can enter into the next Sub-menu.
- Press the SETUP button again to exit the Setup Menu.

General Setup

TV Display

- 4:3 Pan Scan


This is selected when the DVD player is connected to a normal TV. Wide-screen images are shown on the screen, but with some parts cut automatically.

- 4:3 Letter Box

This is selected when the player is connected to a normal TV. Wide-screen images are shown on the screen, with black belt on the top and bottom.

- Wide


This is selected when the player is connected to a wide-screen TV.

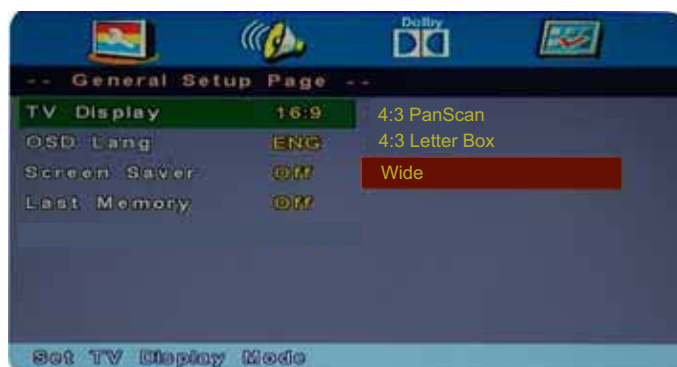

DVD Operation

OSD Language

This is used to select the OSD language.

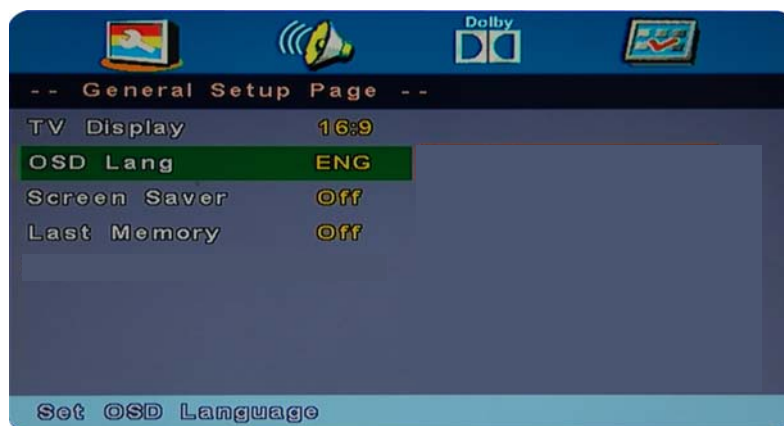

Screen Saver

Start the screen saver, the screen saver image will appear when the player stops or the picture is frozen for a few minutes. This saver can keep the screen from being damaged.

- **On** (Start the screen saver)
- **Off** (Remove the screen saver).



Last Memory

Can set the items on the last memory, "on" and "off" option.

Select "On", the shutdown will shutdown the machine before the settings for memory, re-boot the machine settings. Set near the same time.

Select "Off", every time the machine automatically switched back to the default settings

- **On** (Start the memory)
- **Off** (Remove the memory).

DVD Operation



AUDIO Setup

- **Speaker Setup**

In the "Audio Setup page" press "▼" button to select "Speaker Setup" item, press the "OK ENTER" or "►" button (play) into the "Speaker Setup Page".

DVD Operation




Downmix

- **LT/RT**

A disc recorded multi channel soundtrack, the output signal will be incorporated to left and right channel.

- **Stereo**

A disc recorded multi channel soundtrack, The output signal will be incorporated to stereo.

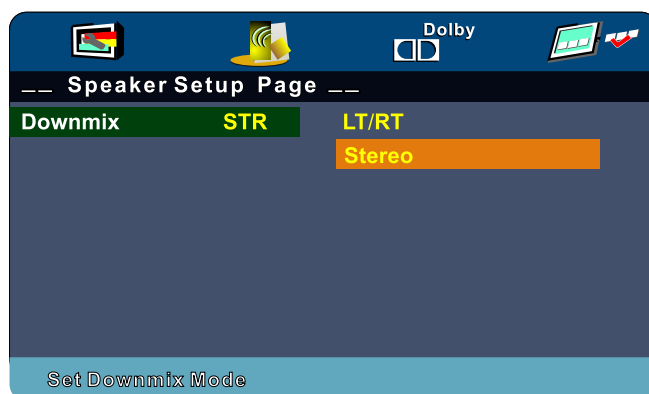


DVD Operation


Dolby Digital Setup

Dynamic

This option is used to set the compression ratio in order to control the sound contrast.

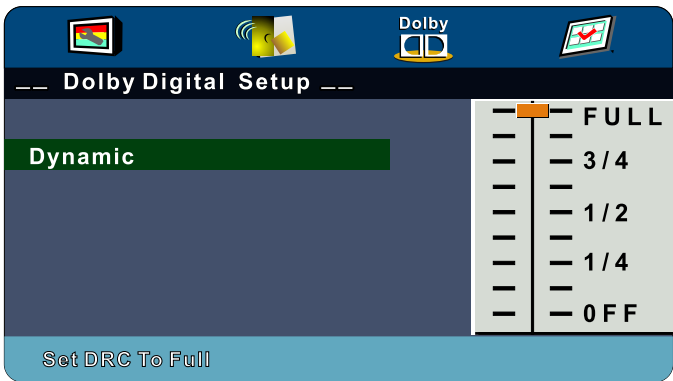

Preference Setup

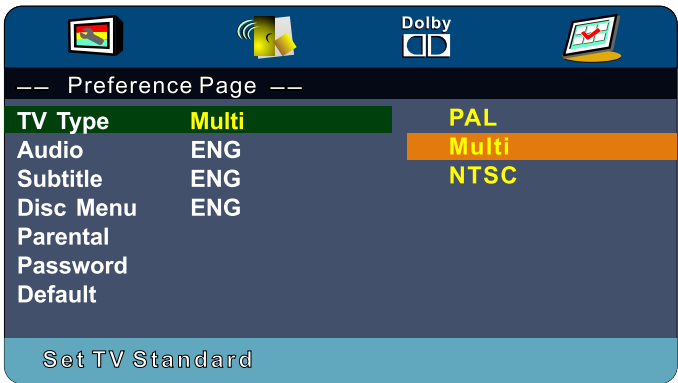

You must press **STOP** twice to enter Preference Page or NO disc

TV Type

• **PAL**

This is selected when the player is connected to an PAL System TV.

• **MULTI**

The player will set the TV system according to the disc in the tray.


• **NTSC**

This is selected when the player is connected to a NTSC System TV.

Audio


If a language listed below is recorded on the disc, you can play the sound in such language.
If not, the language recorded will be used.

DVD Operation

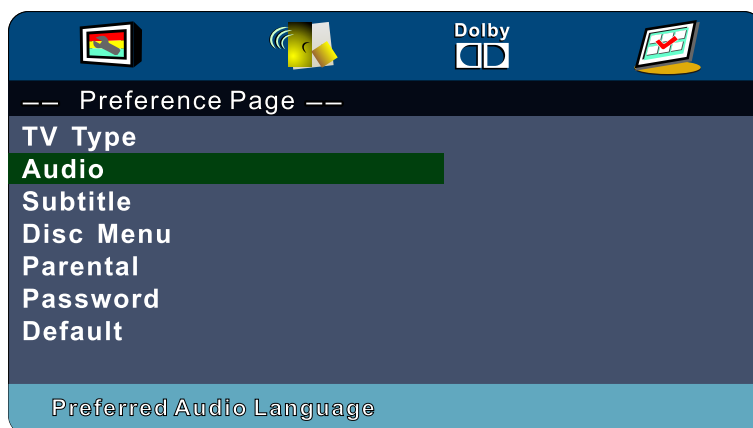


Subtitle

If a language listed below is recorded on the disc, you set the subtitle to be displayed in such language. If not, the language recorded will be used.

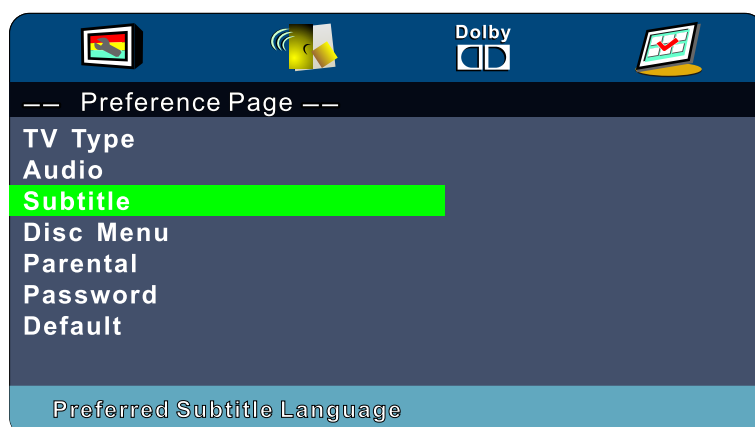

Disc Menu

If a language listed below is record on the disc, you can set the Menu to be displayed in such language. If not, the language recorded will be used.

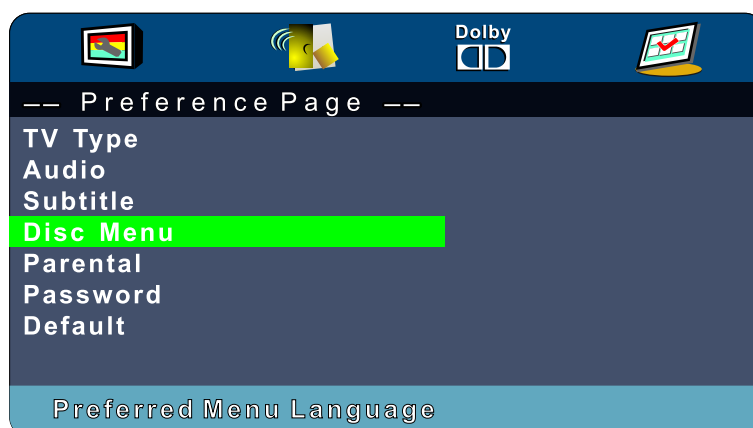


DVD Operation

Parental

When playing disc with parental lock function, you may select an Age Control Grade according to grade of disc and your own preference. For example, if PG is selected, DVD Video disc rated higher than the PG grade cannot be played.


- KID SAFE
- G
- PG
- PG 13
- PGR
- R
- NC 17
- ADULT

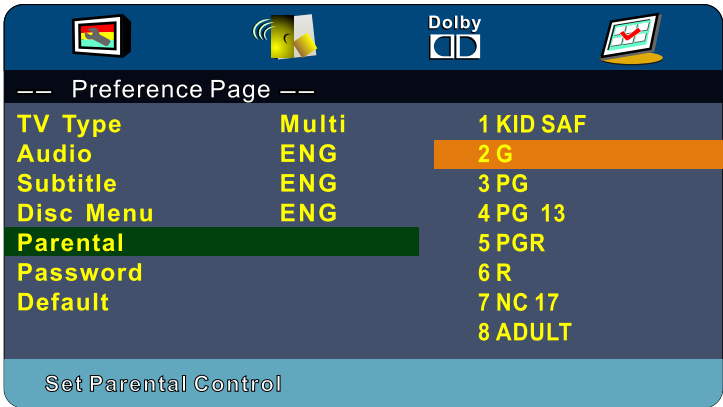



Password

User can change the password that is required when the user wants to change the Age Control Grade in the Parental Lock function.

NOTE:(Default password is 123456)

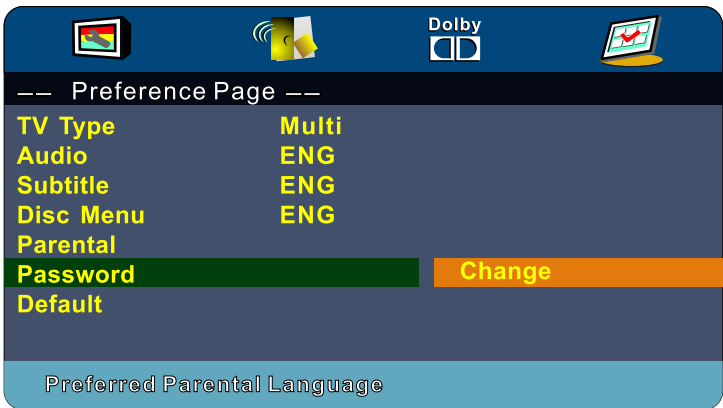

DVD Operation

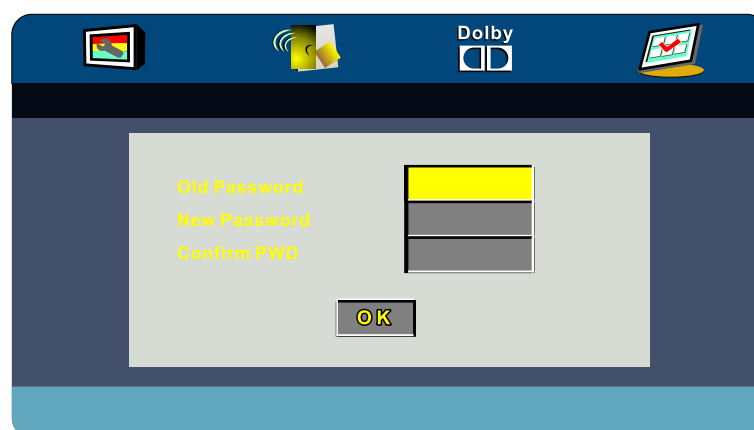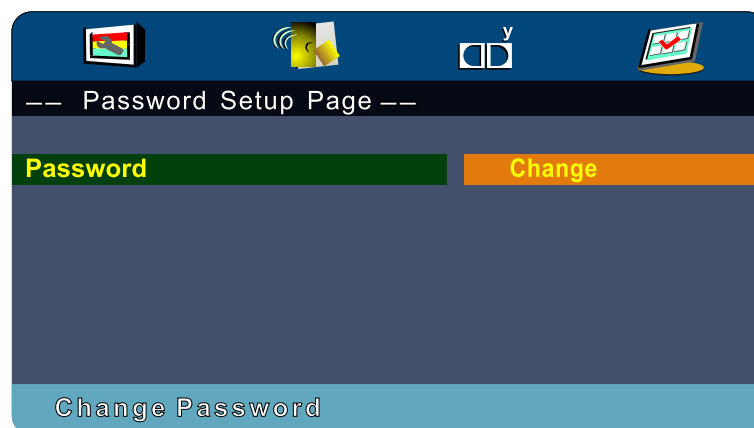

Default

User can load the original factory setting by choose RESET and press OK button .



TROUBLE SHOOTING GUIDE

To assist in locating possible faults use the help guide below.

SYMPTOM TROUBLESHOOTING

No Picture, no sound	Check that the TV is correctly plugged in. Check that the TV is connected to a suitable power source. Check the electrical supply is turned on.
No Picture	Ensure that the TV is powered on. Check that the cables are fitted securely. Ensure the aerial and/or external sources are connected. Press the INPUT button to change the source. Turn the TV on or off.
No Sound	Press the MUTE button and check if Mute mode is set. Switch to another channel and see if the same problem occurs. Press V+ button to see if the problem can be solved.
No picture on some channels	Check that correct channel is selected Adjust the antenna.
No colour on some channels (black & white)	Check if the same problem exists on other channels. Ensure the correct picture settings are selected.
Noisy, Snowy, Ghosting picture.	Check the antenna is connected correctly. Check that the antenna is in good condition. Try moving the antenna.

NOTE: The TV must only be repaired by a qualified registered service person. Never attempt to remove the back cover as the TV has dangerous voltages inside that may cause fatality or fire.

TECHNICAL SPECIFICATIONS

Specifications of the TV that you have just purchased may vary from the information in this table due to technical innovations.

TV Specifications

TV System	PAL / BG / DK / I
Audio System	BG / DK / I SECAM L/L'
Screensize	26"(Diagonal)
Resolution	1920 x 1080Pixels(RGB)
Aerial input	75 Ω (unbalanced)
Audio output power	2 x 8W
Power requirements	AC 100-240V~ 50/60Hz
Power consumption	80W
USB File System	Hi speed fs,FAT32,FAT16 (max supported size 1TB)



If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)